


FACES

WHITE GLOSSY LACQUERED

WHITE GLOSSY LACQUERED

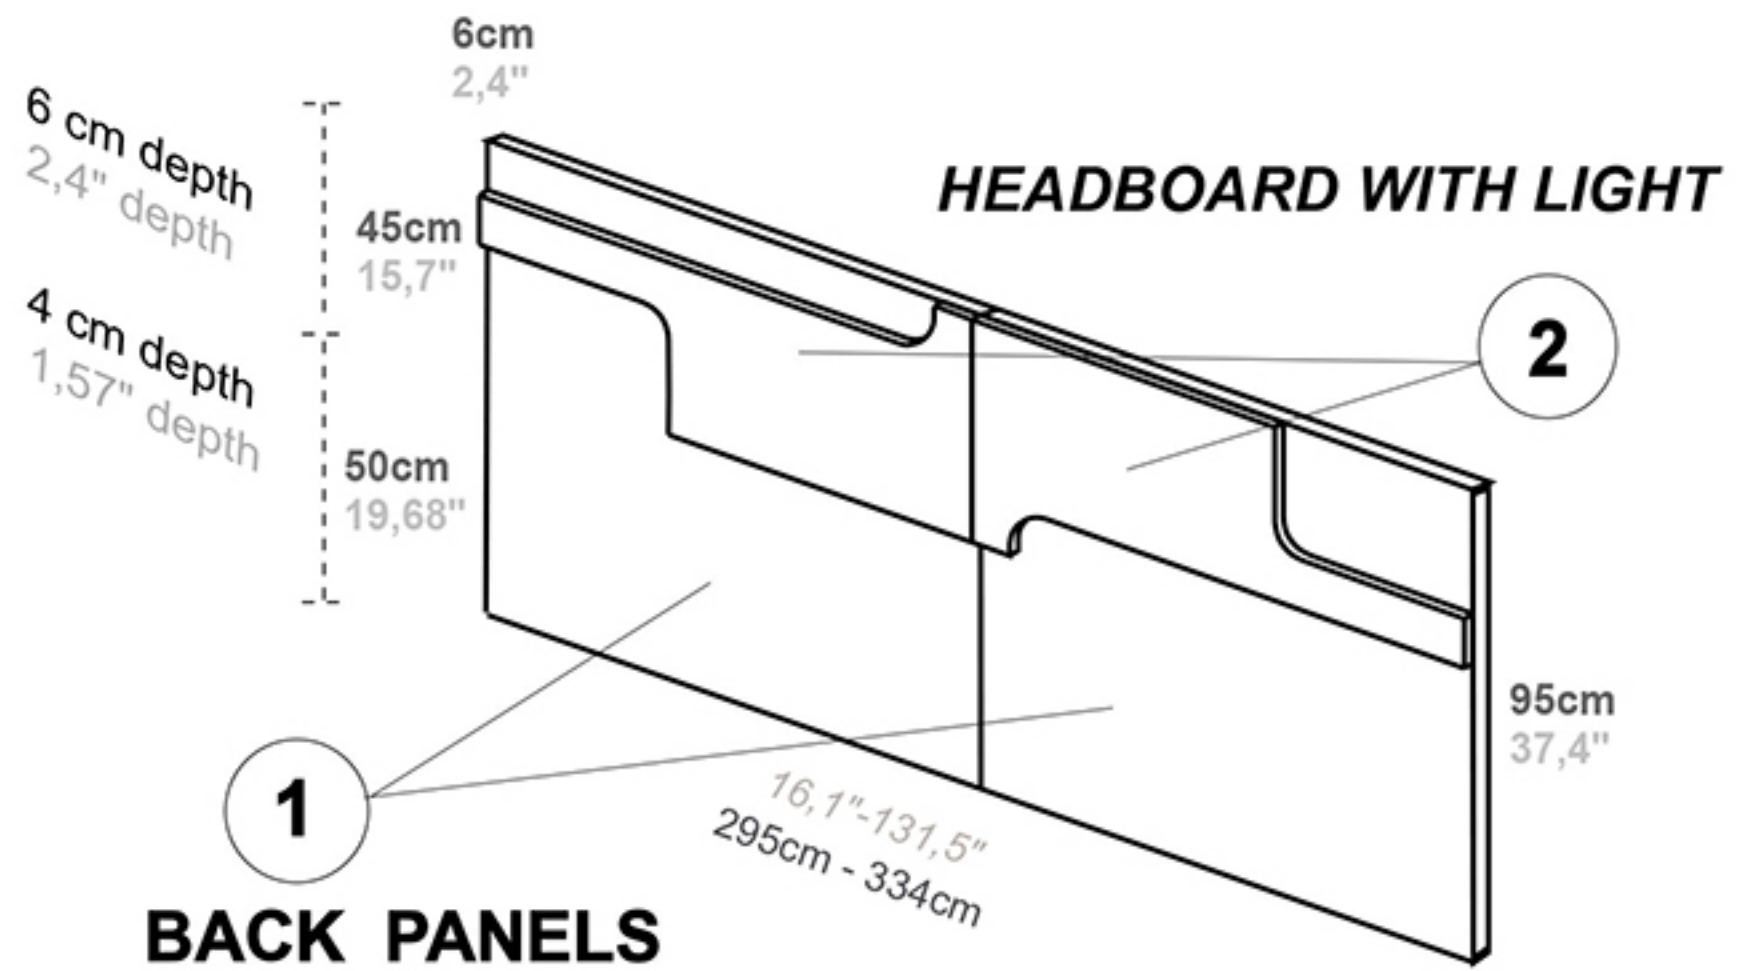


BACK PANELS

White glossy lacquered

For mattress width	QS	KS
Code	28232	28234
M ³	0,42	0,48


BEDFRAME "NEW CURVED"

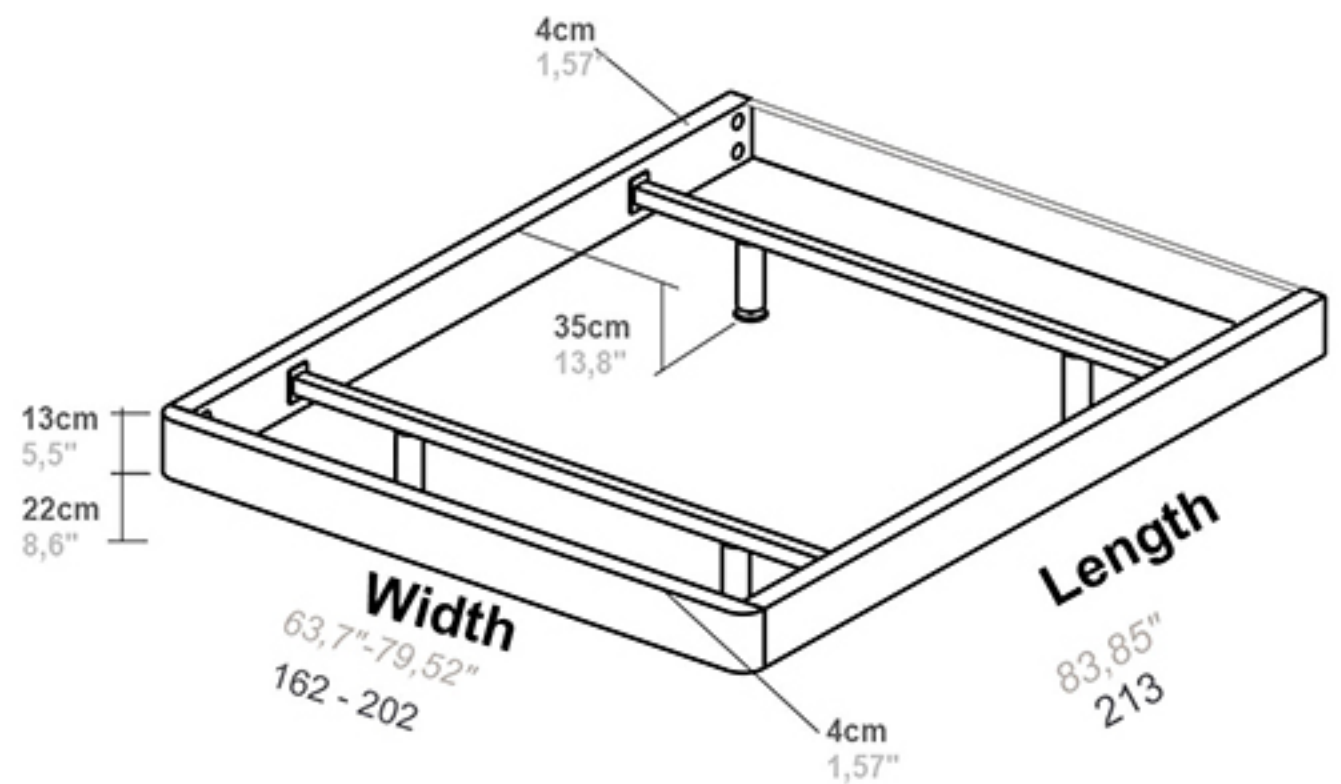

White glossy lacquered

For mattress width	QS	KS
Code	6885U	6890U
M ³	0,16	0,18

SET OF DRAWERS FOR BEDFRAME

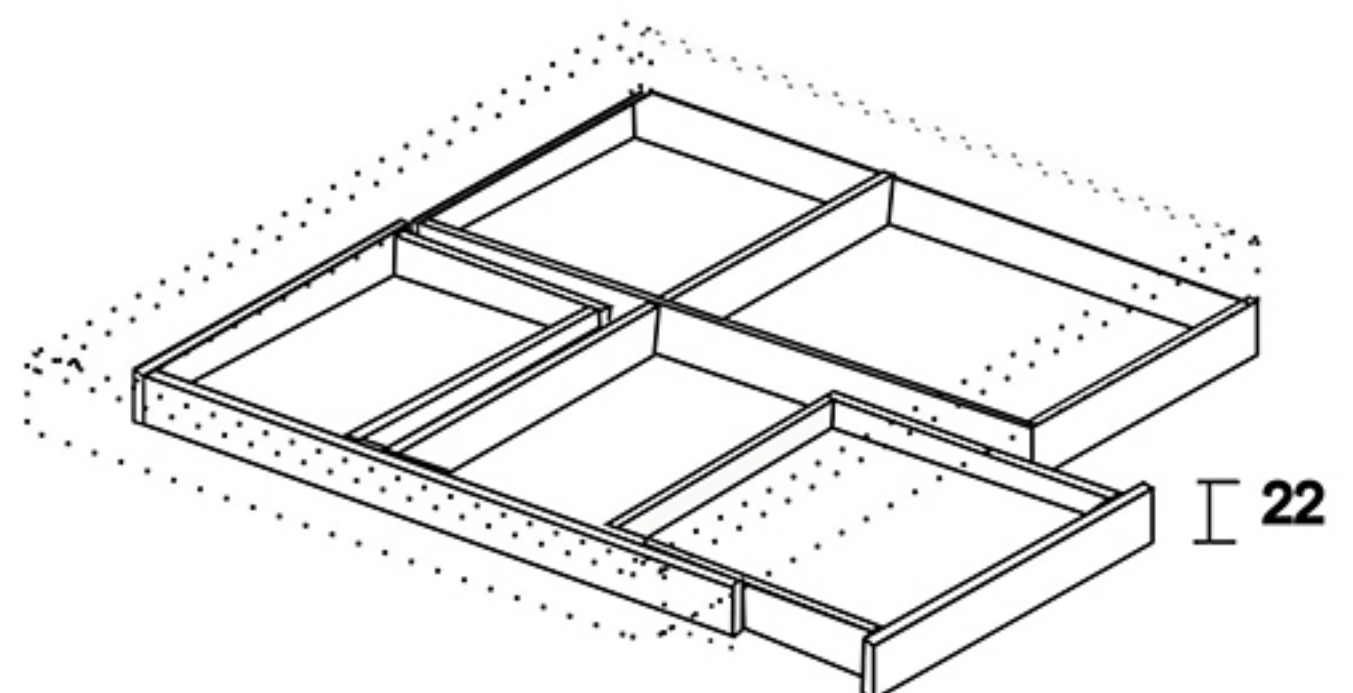


White glossy lacquered


For mattress width	QS	KS
Code	6885U9	6890U9
M ³	0,73	0,79

POP headboard assembly instructions



1.- Union both rear pannels

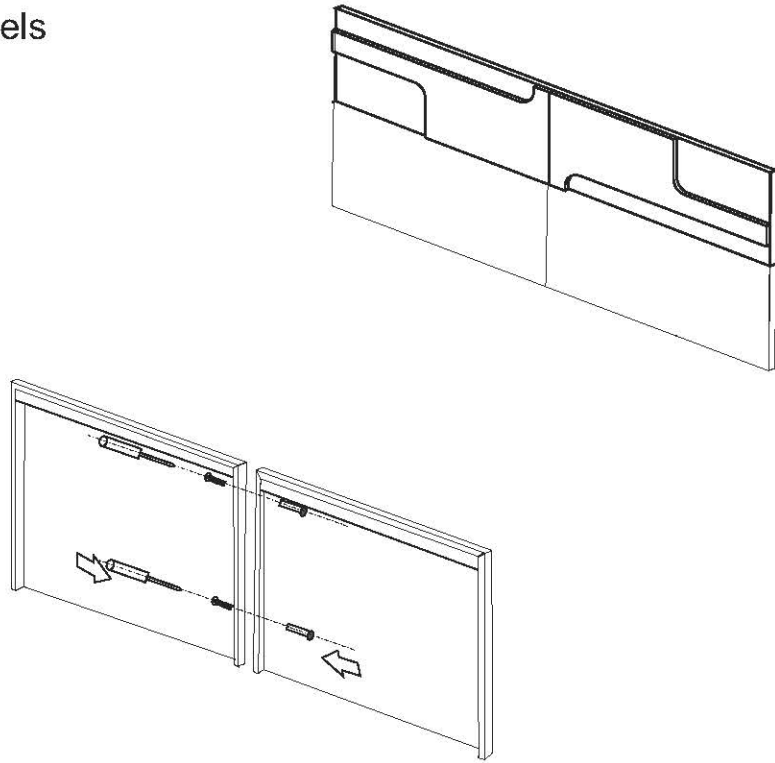


2.- Measure the height of rear panel where it has to be hanged to the wall

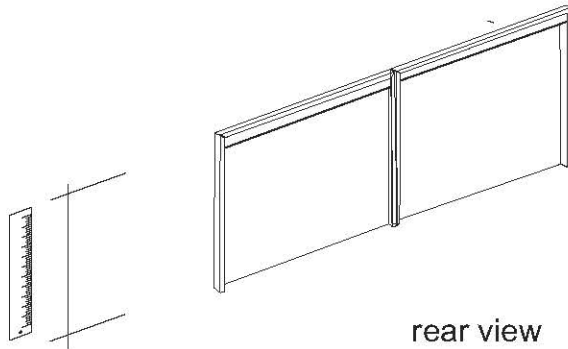

3. 1.-- Fix the hanger in the wall to fix the panels

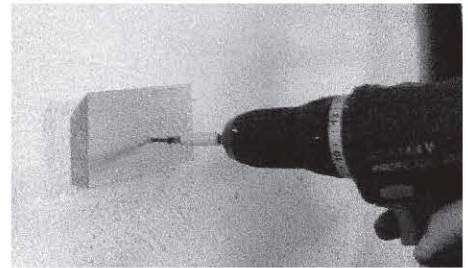
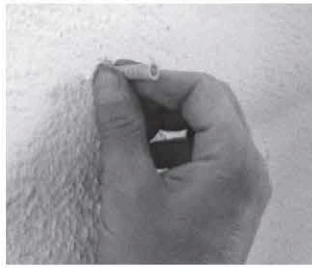


3. 2.-- Fix the hanger in the wall to fix the panels

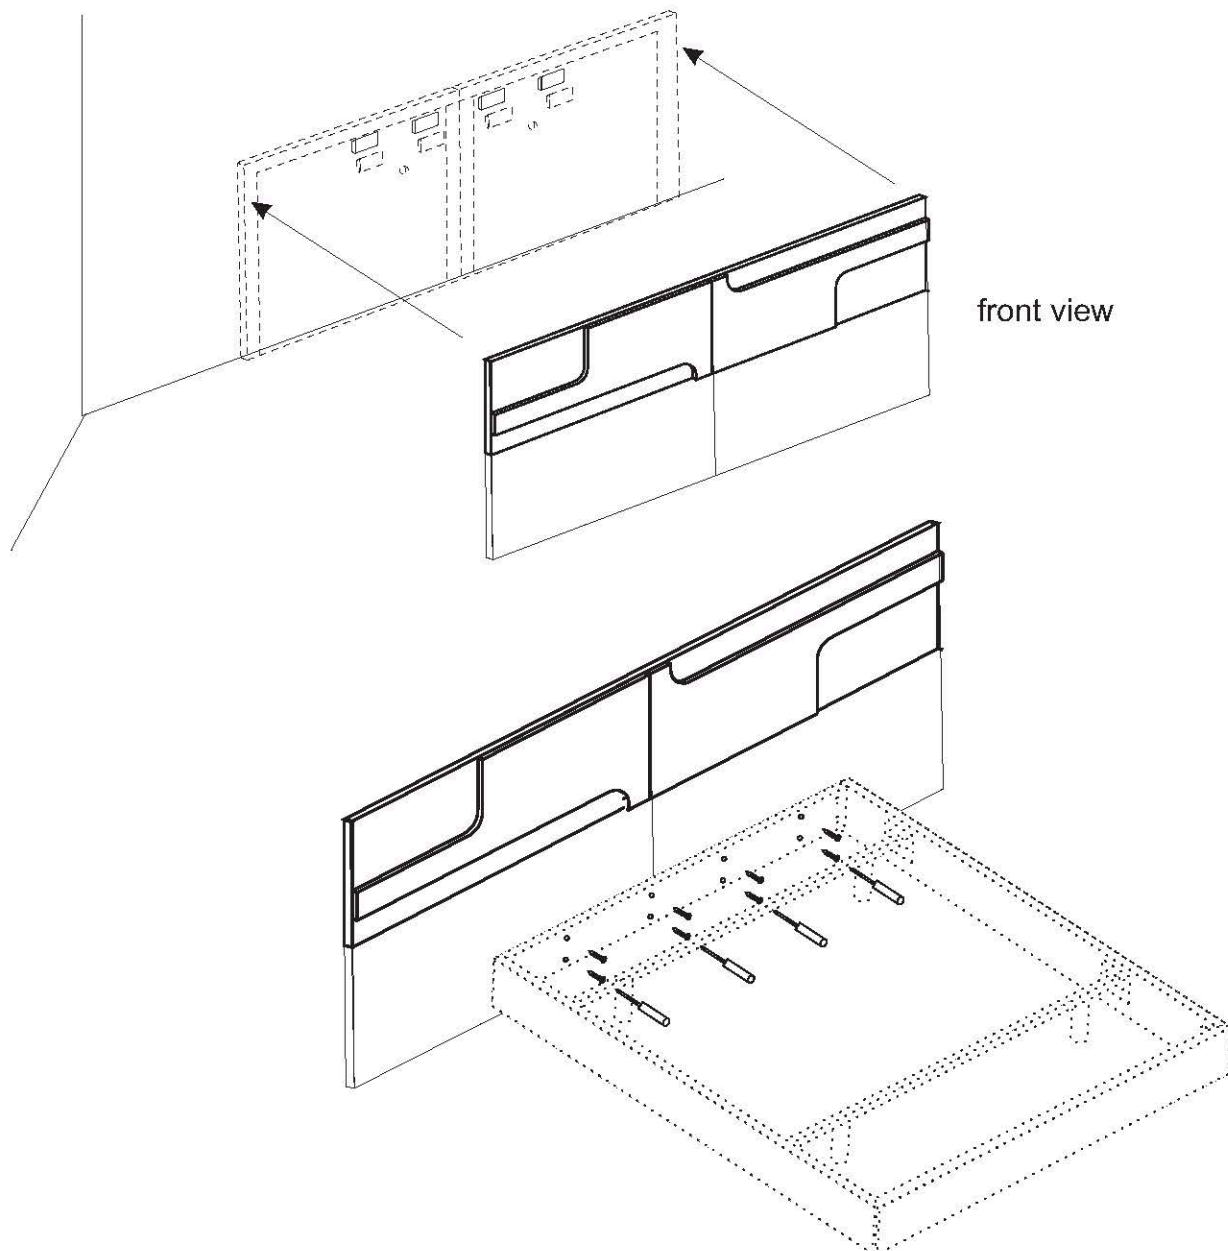




Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. SARA

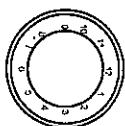

MADE IN ITALY

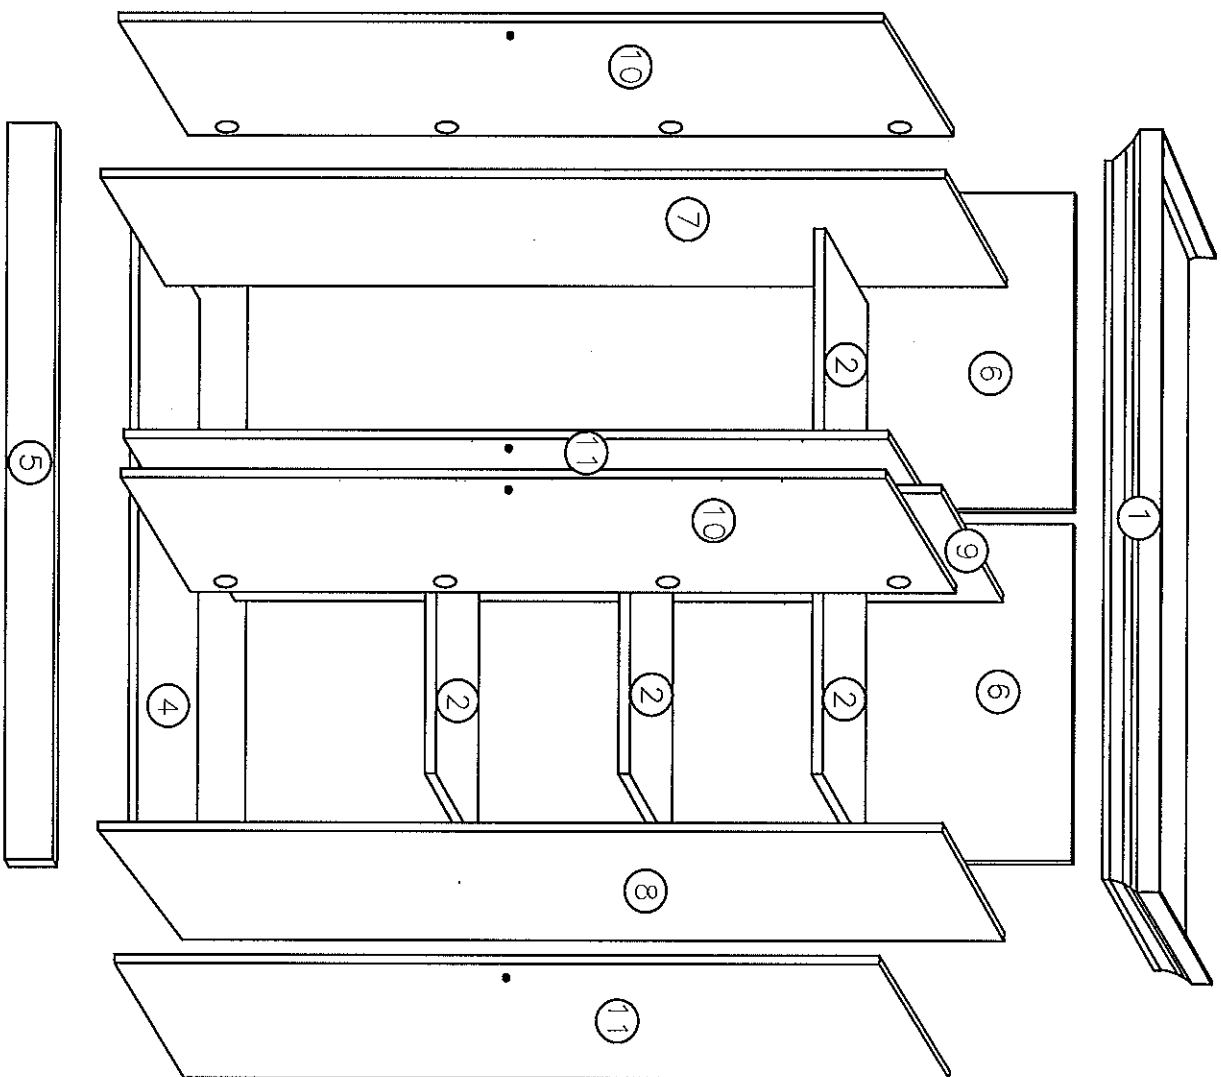

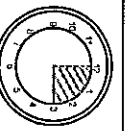


15 Min.

CHECKLISTE BESCHLÄGE





Kode	S	P3
ARTIKEL		
Menge	16	3



PP2	Z
tbl 8rma X 40	1
1	1

D	E
1	1



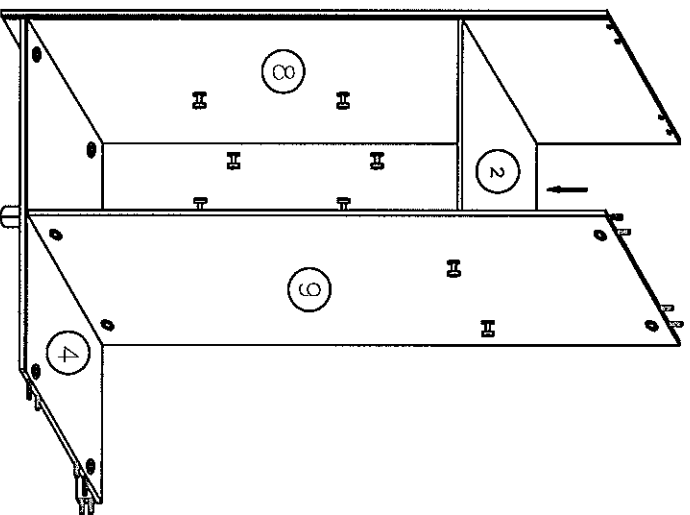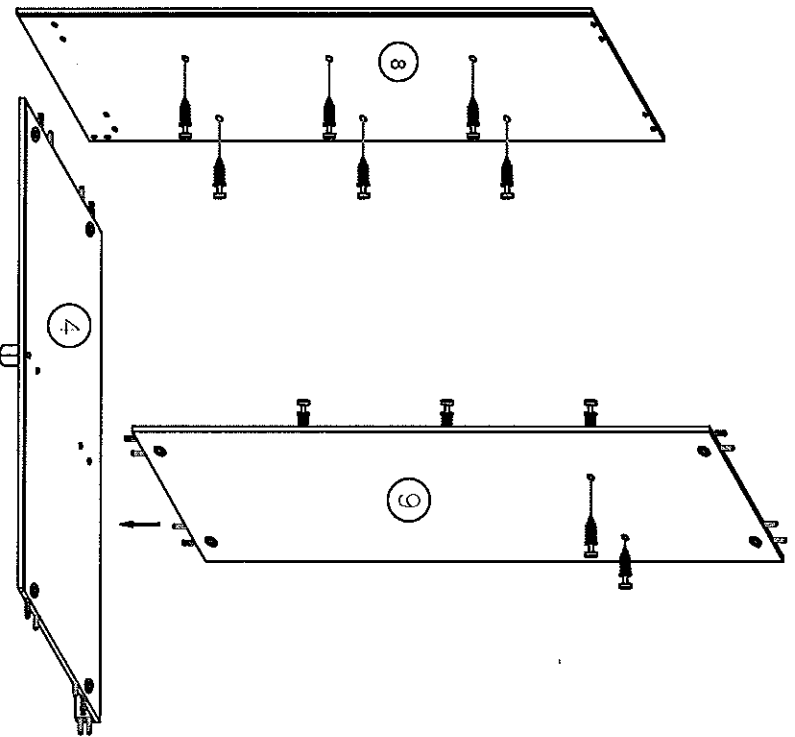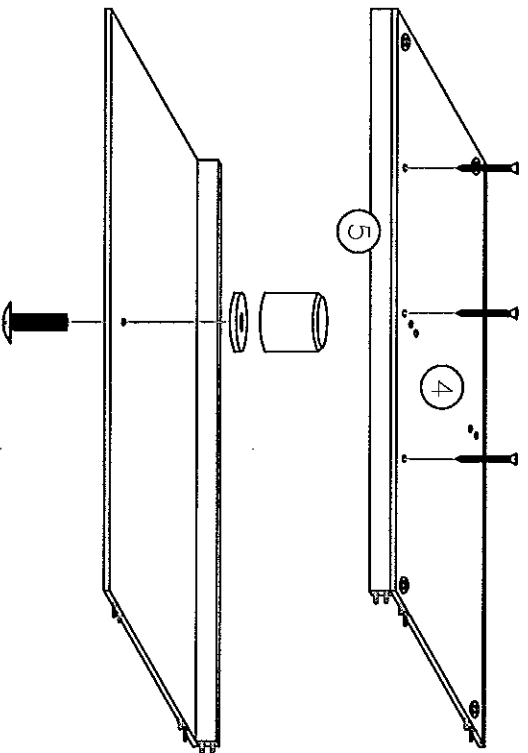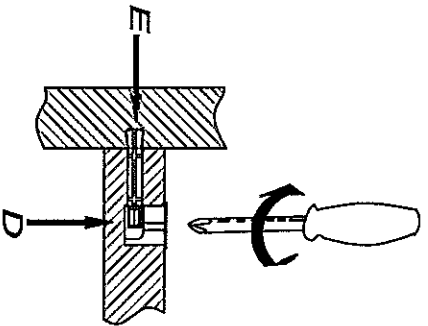

MASSITAB

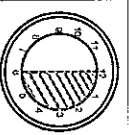







30 Min.



CHECKLISTE BESCHLÄGE

Kode	P1	Y
ARTIKEL	 fps 3,5 X 15	
Menge	10	10

0	1	2	3	4	5	6	7	8	9

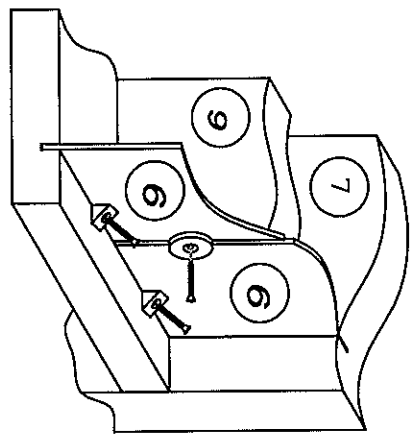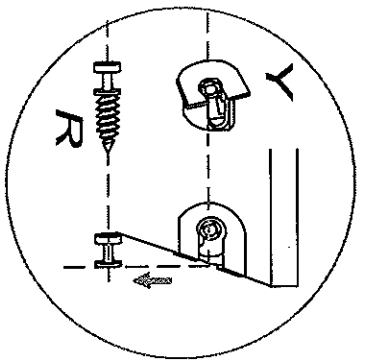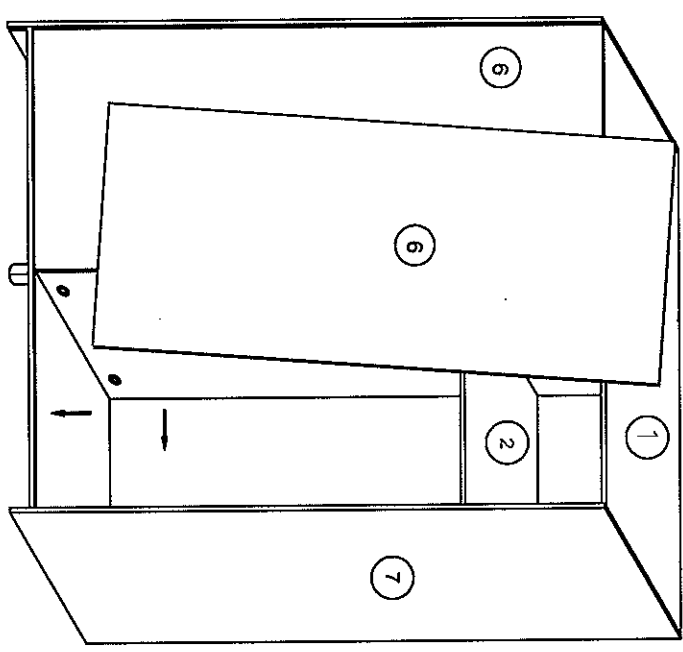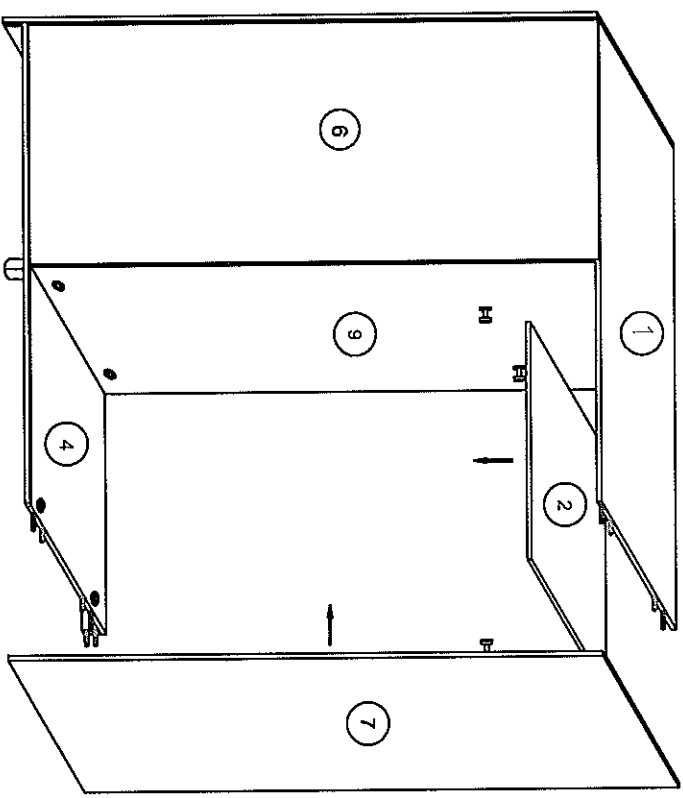


MASSITAB

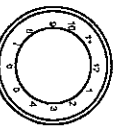




CHECKLISTE BESCHLÄGE

Kode	T	P1
ARTIKEL		
Menge	16	32
		tps 3,5 X 15

J		PP3
2		tbi 6 ma X 25





MASSITAB

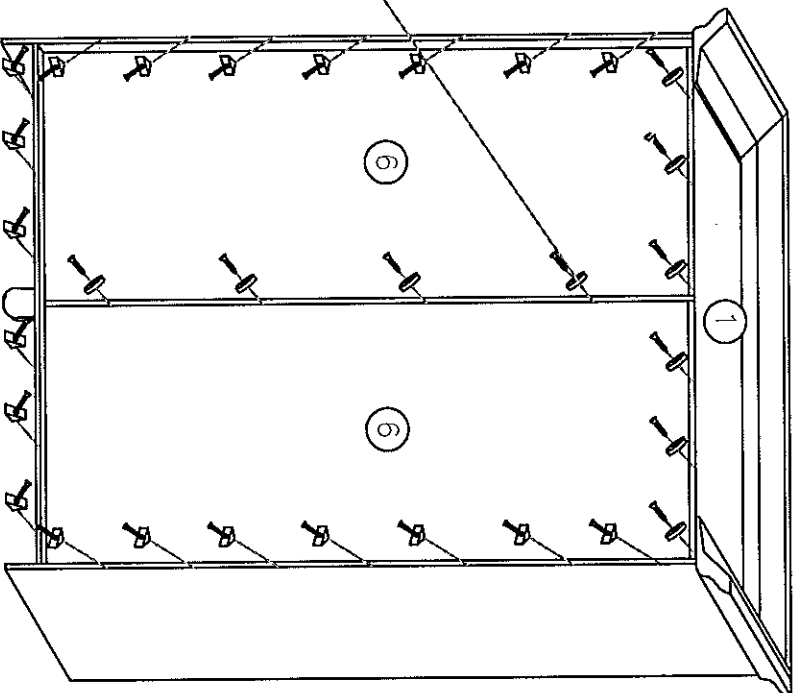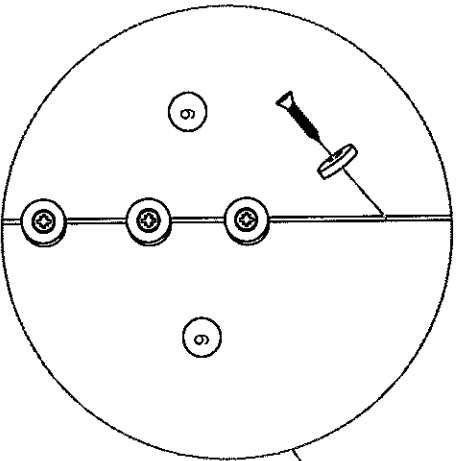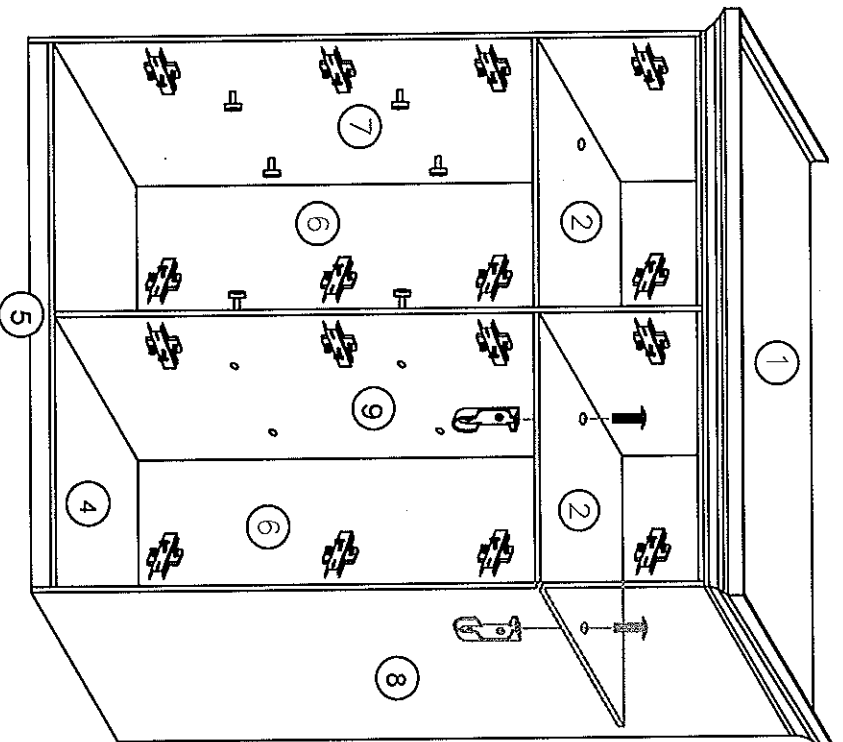

Montageschema - KLEIDERSCHARN 4-TUERIG

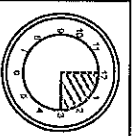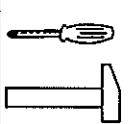

Mod. SARA



15 Min.


MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode	N	PP4
ARTIKEL		
Menge	2	2

tbl 4 ma X 22,5

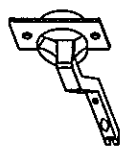

V		
16		

MASSITAB

